



QX Series Display

User Manual



Save These Instructions



Table of Contents


Purpose of the document: - 1







1. Overview of different Menu screens	2
2. Description of the Display screen in detail.....	4
2.1. Run Screen	4
2.2. Configuration	5
2.3. Password	6
2.3.1. Updating parameters of the QX Series tool	9
2.3.2. Radio Enable/Disable	9
2.3.3. Gang count	10
2.3.4. Shiftdown Speed	10
2.3.5. Shiftdown Point Config	11
2.3.6. Free Speed.....	11
2.3.7. Torque Threshold	12
2.3.8. Angle	12
2.3.9. Torque.....	13
2.3.10. Unit of the Torque.....	14
2.3.11. Direction of Rotation	14
2.3.12. Strategy	15
2.3.13. Save / Ignore Settings	15
2.4. Warning Screen	16
2.5. Shunt Calibration, RF Signal Strength and Battery level	16
2.6. Cycle count.....	17
2.7. Angle.....	17
2.8. Torque.....	18
Appendix 1 : Status LED Definitions.....	19
Appendix 2 : Tool Fault codes	19
Parts and Maintenance.....	20

Purpose of the document:

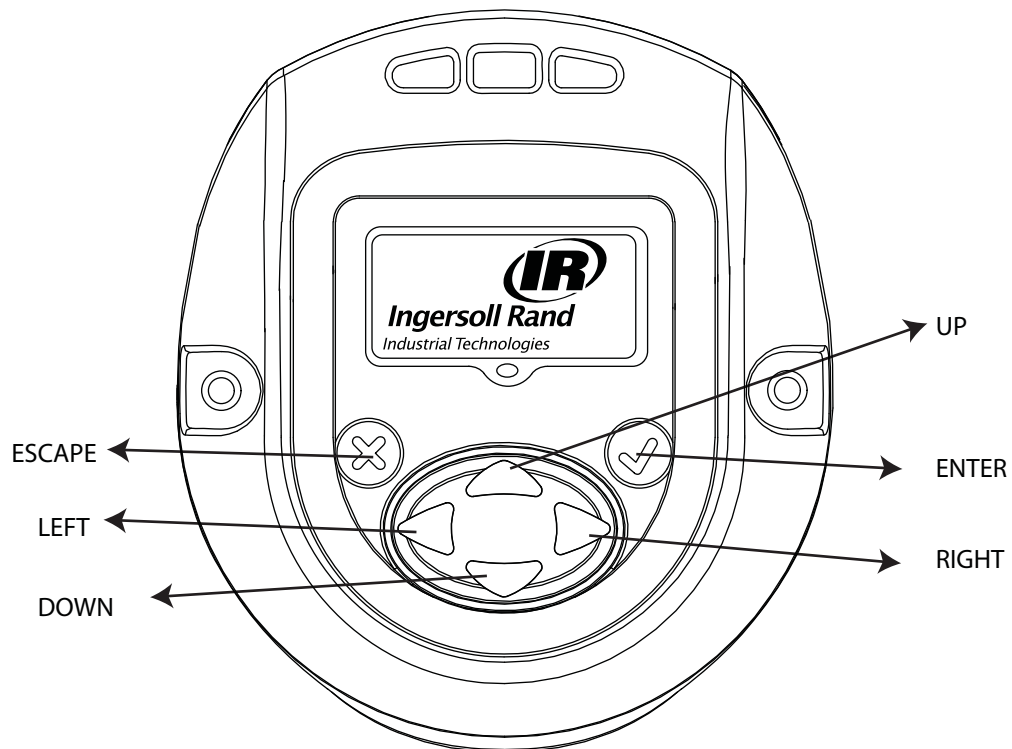
This document provides details about different menu screens, their description and how to edit those screens in display module, required for the operation of QX Series Hand Tool.


The image Below shows the display of QX Series display module with descriptions of the programming keys.

  

Symbol	Function
	Escape / Exit
	Enter / Edit
	UP
	DOWN
	RIGHT
	LEFT

1. Overview of different Menu screens

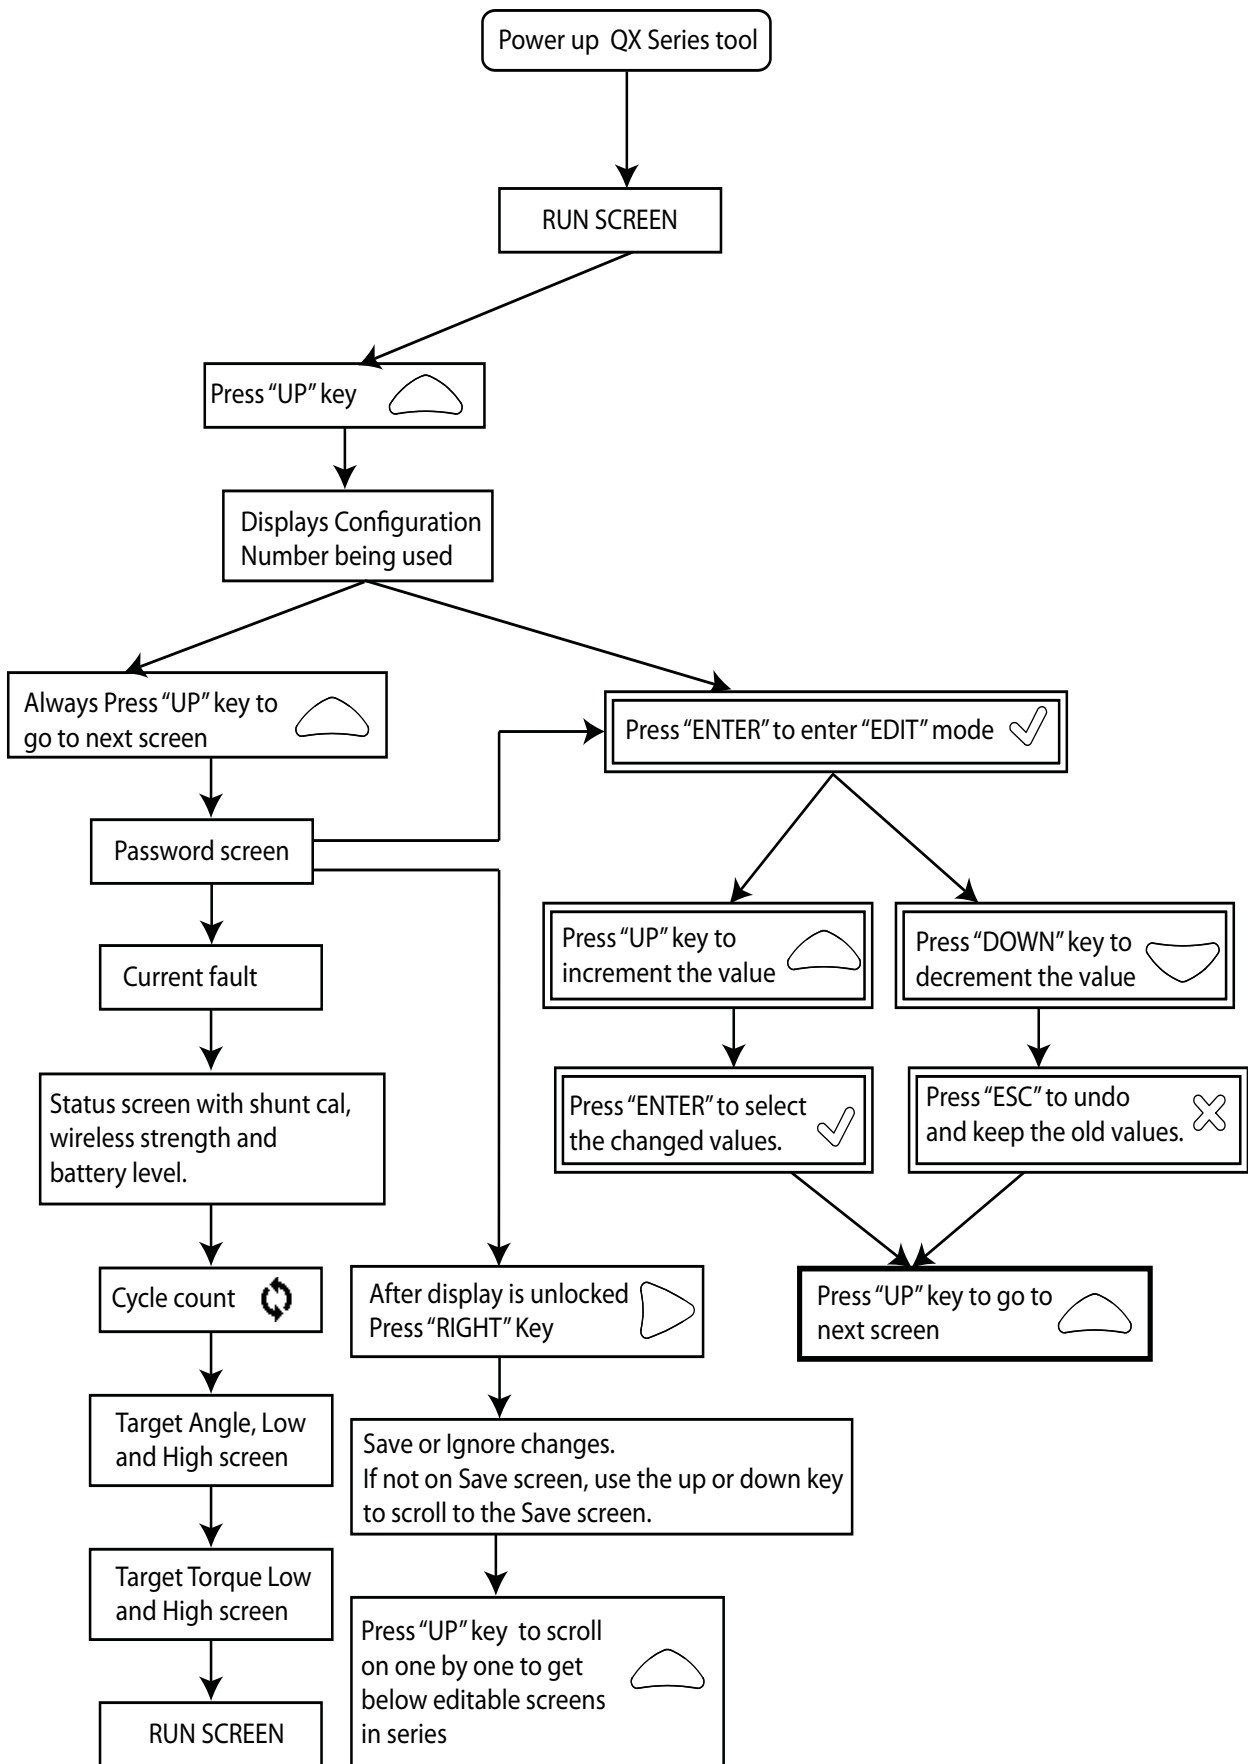

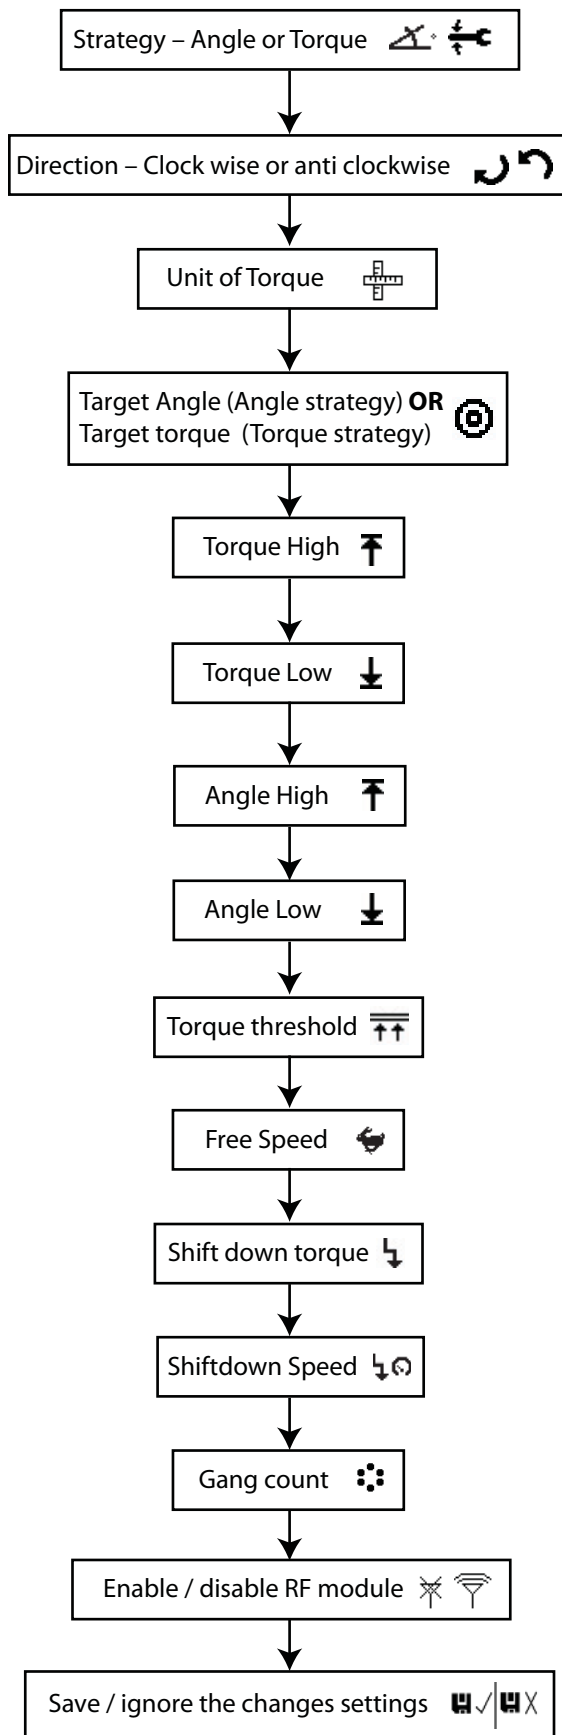

2. Description of the Display screen in detail

There are three sections in the QX Series display screen, one "PRIMARY" on the top and two "SECONDARY" which are on left and right bottom of the display.


2.1. Run Screen

Pressing "ENTER" key after switching on the display will show this image.

PRIMARY Section - shows latest peak torque (for a torque strategy) or the latest peak angle (for an angle strategy), with units.

The SECONDARY LEFT - shows the cycle count or gang count, if gang count is programmed.

The SECONDARY RIGHT - shows the active configuration number.

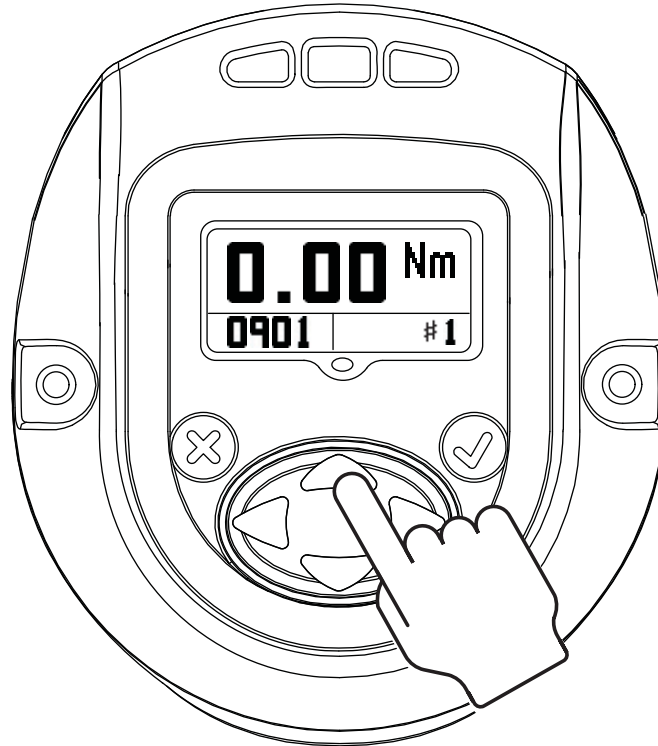


2.2. Configuration


Pressing "UP" will advance to next screen.

Screen shows CONFIGURATION setting used in the tool.


NOTE: Only Configuration 1 can be programmed through the display module.

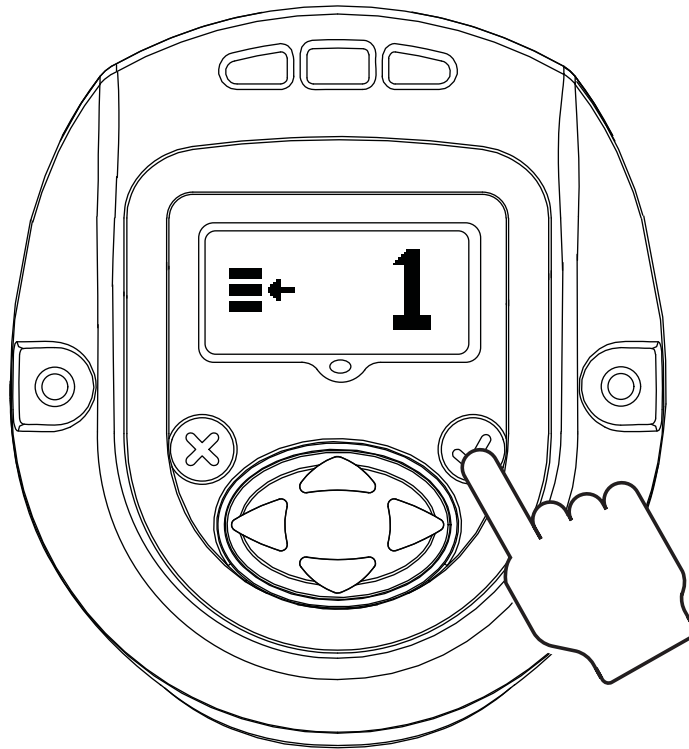

Pressing "ENTER" will enable the "EDIT MODE" (This procedure to enter "EDIT MODE" is same for all settings update)

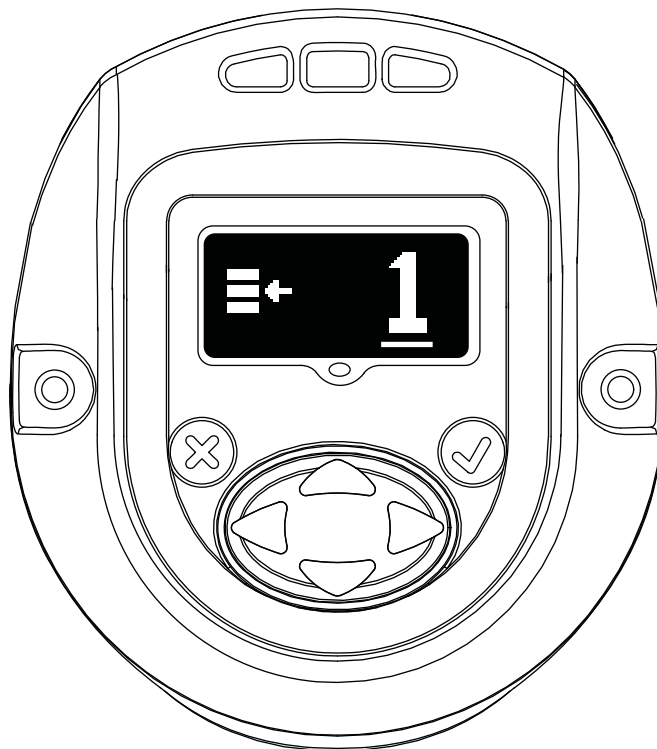


“UP” or “DOWN” key can be used to update the configuration. Pressing “ENTER” again will select the modified configuration.

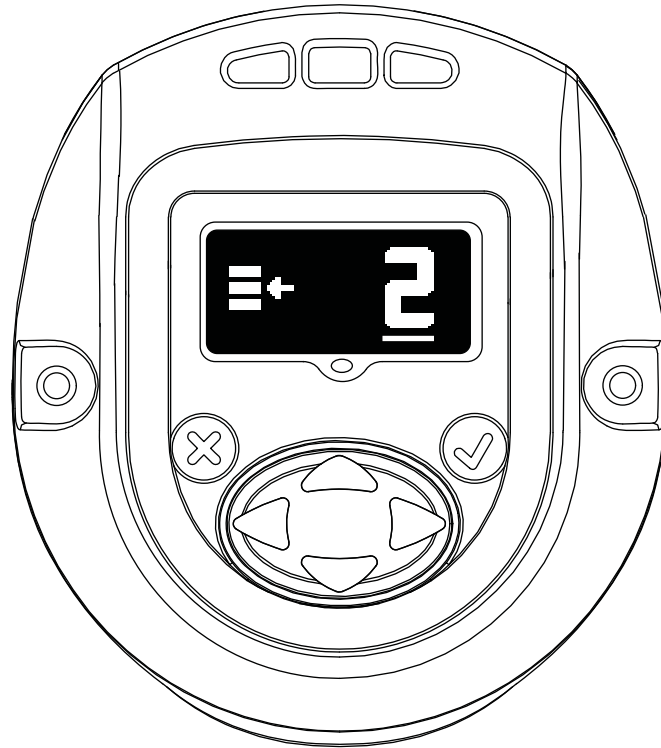

2.3. Password

The password screen shows whether the display is locked or unlocked. If the display is locked the parameters of the QX Series Hand tool cannot be edited.

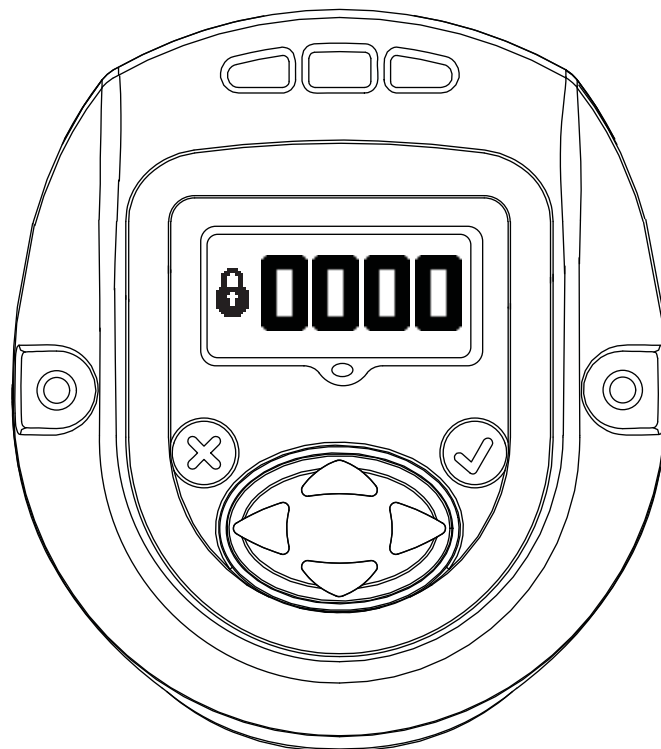

Password can be changed by entering into "EDIT MODE" and using "UP" or "DOWN" key.




If "1234" is entered on the Password screen, the user may use the left arrow to go to the Tool ID and software version page



The Primary Display is the "Tool Location ID".


Lower Secondary Right is the "Display Firmware" Version.

Lower Secondary Left is the "Motor Controller Firmware" Version.

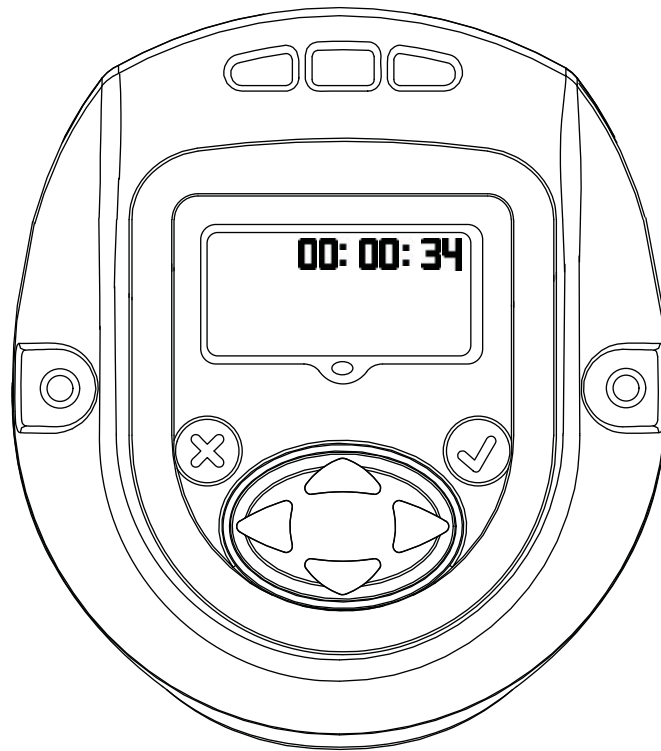

Displays Tool time in HH:MM:SS format. Press the Down key to display the tool time in HH:MM:SS format.

Remaining screens are for internal use only to view log location. Press the Down key to display a screen for internal use only to view log location. Press the Down key again to display a second log screen.

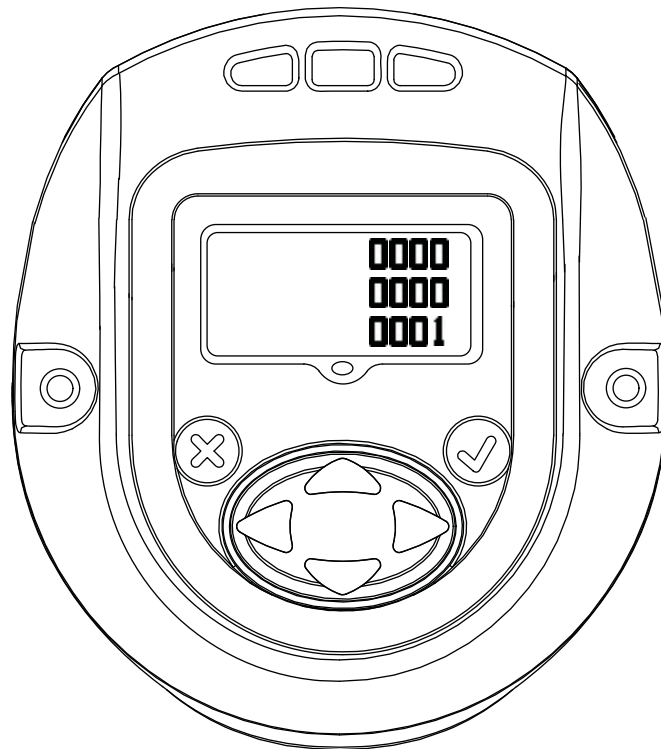

Press the Down key again to return to the Tool ID page. Pressing the right arrow from this page exits back to the password display.



Press 'ENTER' to enter the 'EDIT' mode. Enter the appropriate password to unlock the tool. Press 'ENTER' to exit the 'EDIT' mode.

2.3.1. Updating parameters of the QX Series tool

After display is unlocked with a valid password, Pressing "RIGHT" key will advance to following settings that can be modified as required.

The settings can be modified by entering "EDIT MODE" and using "UP" or "DOWN" key or "RIGHT" or "LEFT" key as required.

2.3.2. Radio Enable/Disable

This screen allows the user to enable or disable the radio module. The selection on the left disables the radio module and the selection on the right enables the radio module.




 RADIO DISABLED

 RADIO ENABLED


2.3.3. Gang count

The below screen shows the gang count number of bolts to be fastened per Group, Gang, or Set for Configuration 1. This can be modified by entering "EDIT MODE".

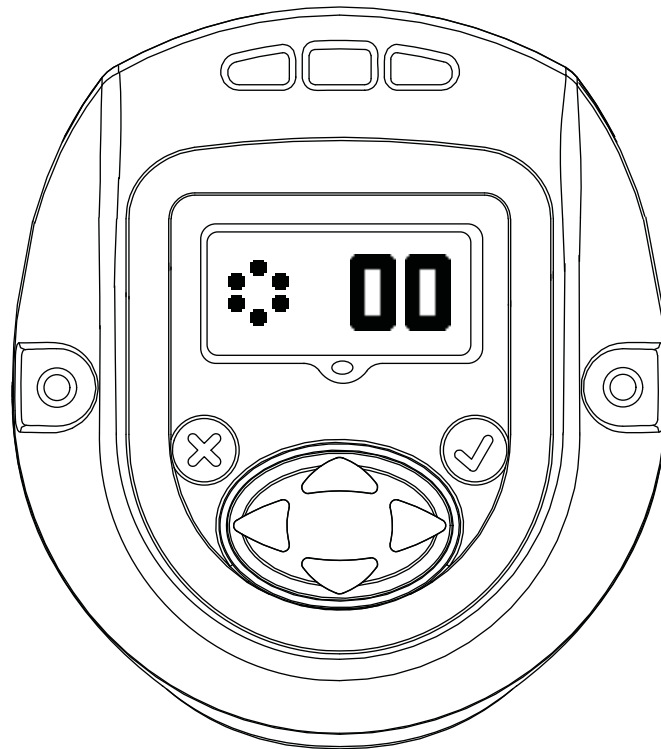


2.3.4. Shiftdown Speed

This screen indicates shiftdown speed of the QX Series tool. Shiftdown speed can be edited by entering "EDIT MODE" and updating using UP and DOWN arrow. Programmed speed is a percentage of tool maximum speed.

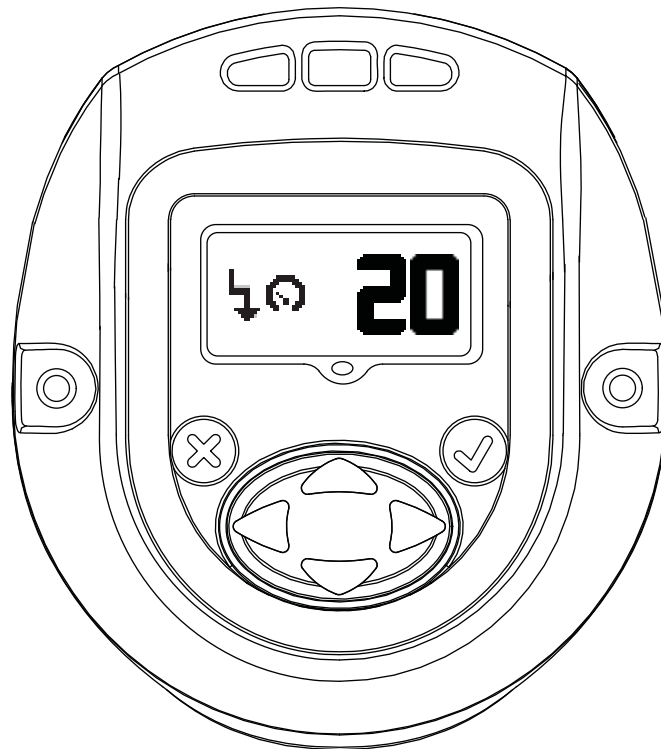


2.3.5. Shiftdown Point Config

This screen indicates “Torque Threshold for shiftdown point”. This can be changed by entering “EDIT MODE” and updating using “UP” or “DOWN” key.

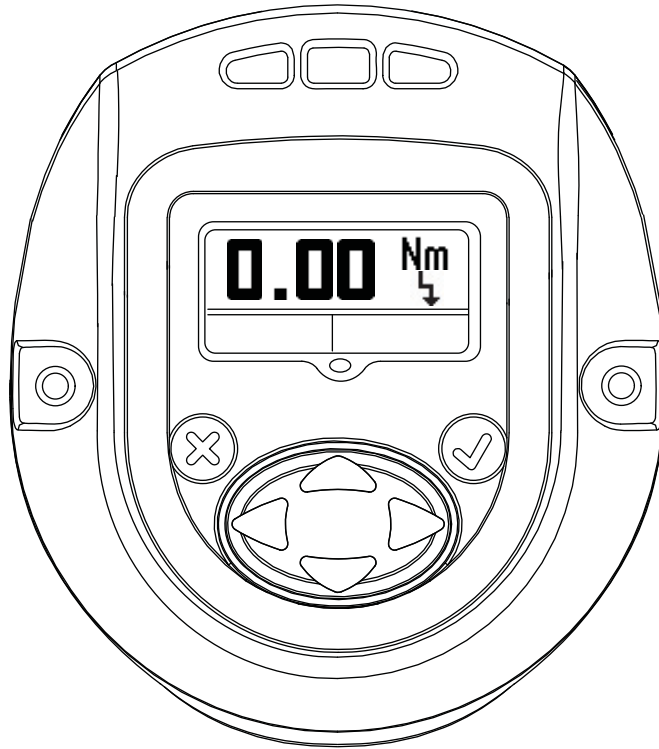

2.3.6. Free Speed

The below screen indicates free speed of the QX Series tool. The value can be edited by entering “EDIT” mode and using “UP” and “DOWN” arrow. Programmed speed is a percentage of tool maximum speed.

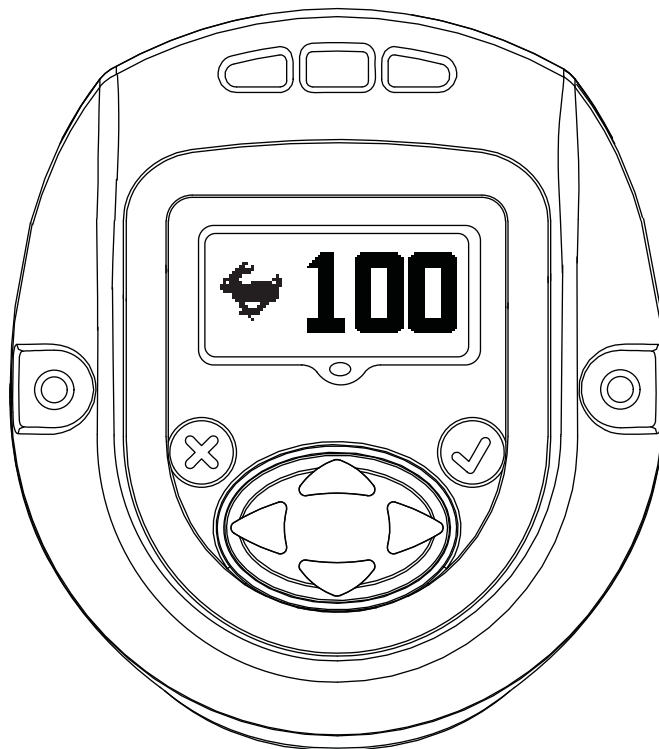

2.3.7. Torque Threshold

The Torque at which reading of the angle will be started. The value can be edited by entering "EDIT" mode and using "UP" and "DOWN" arrow.





2.3.8. Angle

Angle "LOW" Display

Angle "LOW" can be modified in this mode by entering "EDIT" mode and using "UP" or "DOWN" key.

Angle "HIGH" Display


Angle "HIGH" can be modified in this mode by entering "EDIT" mode and using "UP" or "DOWN" key.

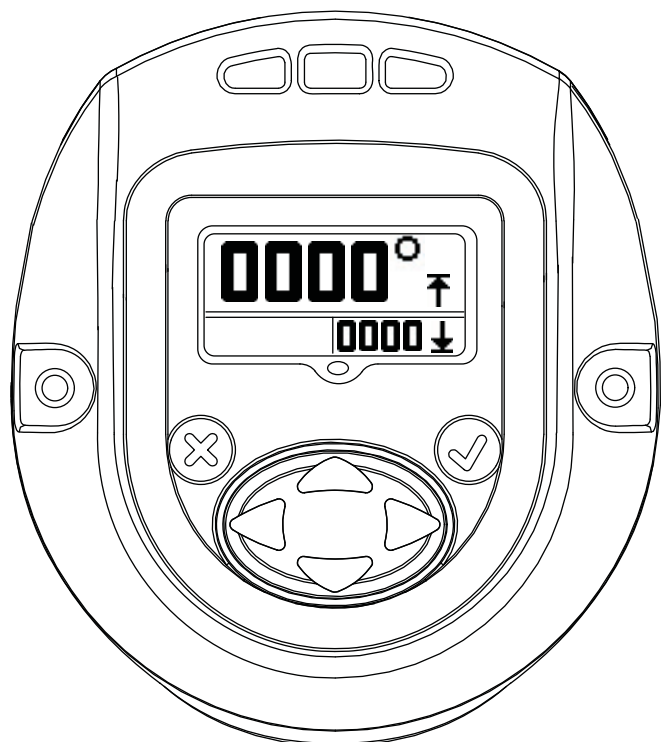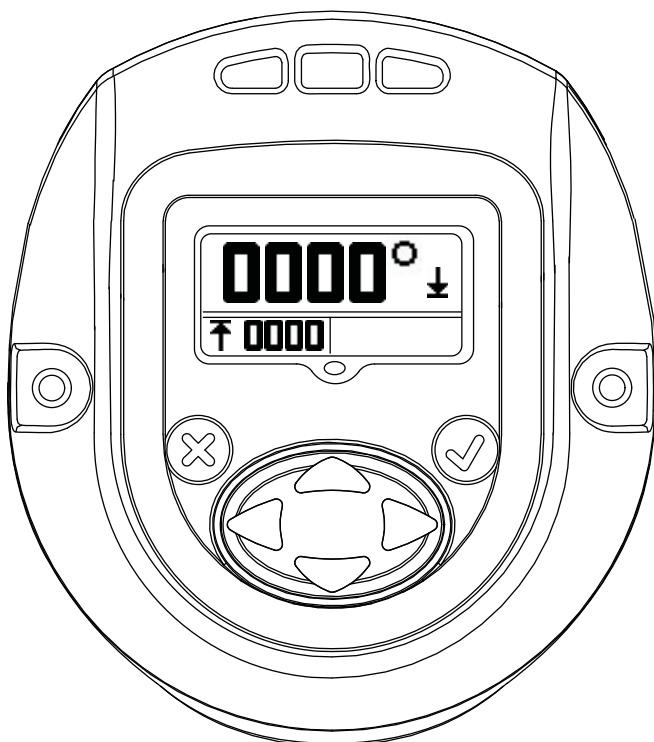

2.3.9. Torque

Torque "LOW" Display

Torque "LOW" can be modified in this mode by entering "EDIT" mode and using "UP" or "DOWN" key.

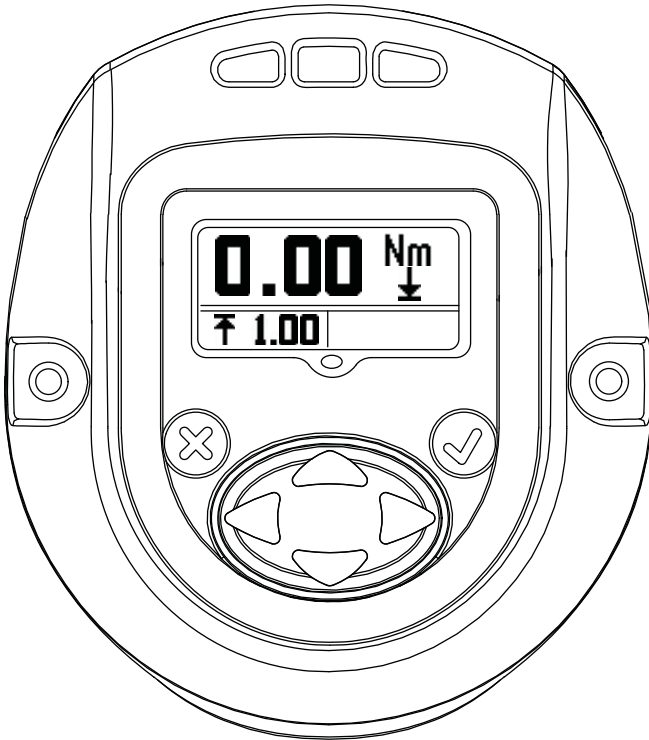


Torque "HIGH" Display

Torque "HIGH" can be modified in this mode by entering "EDIT" mode and using "UP" or "DOWN" key.



Torque "TARGET" Display


Torque "TARGET" can be modified in this mode by entering "EDIT" mode and using "UP" or "DOWN" key.

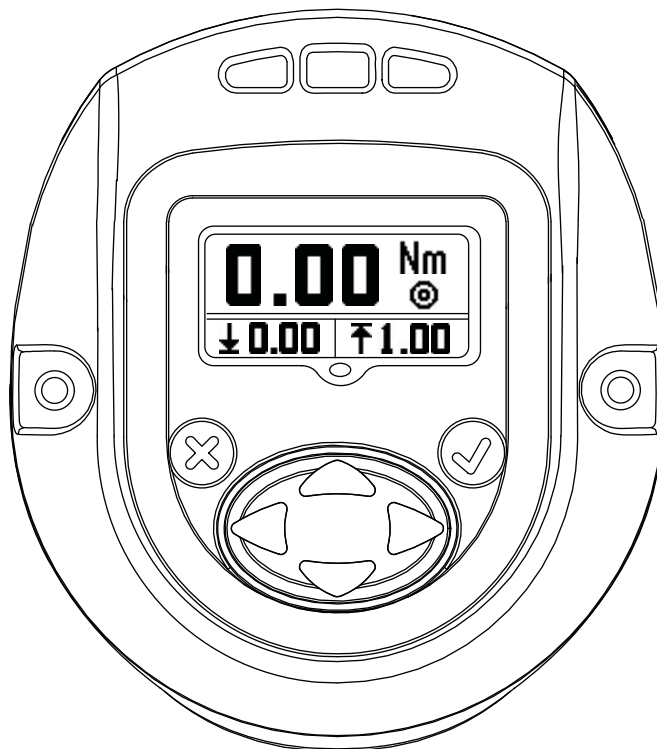

2.3.10. Unit of the Torque

Indicates unit of the Torque displayed in Configuration 1.

This can be changed by entering "EDIT MODE" and updating using "UP" or "DOWN" key.

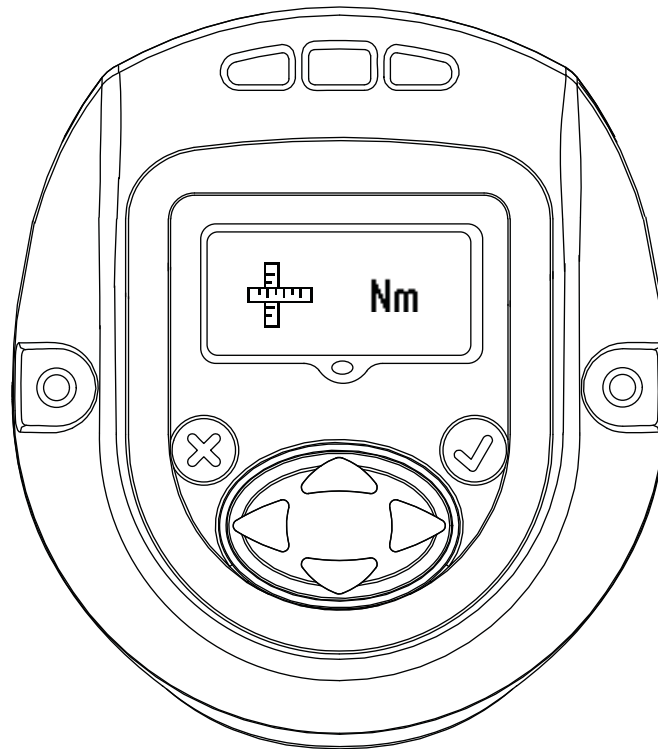


2.3.11. Direction of Rotation

Image shows direction of rotation in which the QX Series hand tool rotates. ↺ Indicates counter clock wise rotation

↻ Indicates clock wise rotation

This can be changed by entering "EDIT MODE" Key and updating using "RIGHT" or "LEFT" key

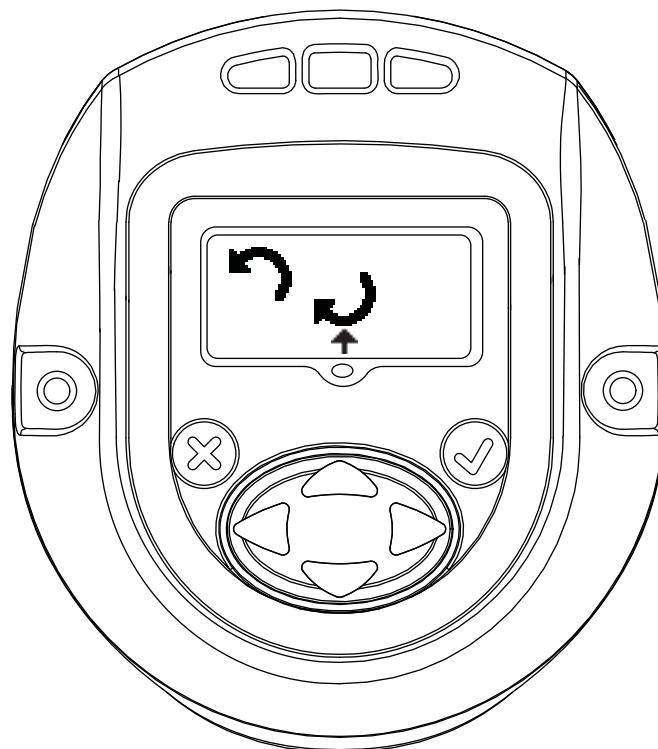


2.3.12. Strategy

This screen indicates configuration strategy being used.

Left – Angle, Right – Torque

The pointing arrow indicates the present configuration being used.

This can be changed by entering "EDIT MODE" and using "RIGHT" or "LEFT" key

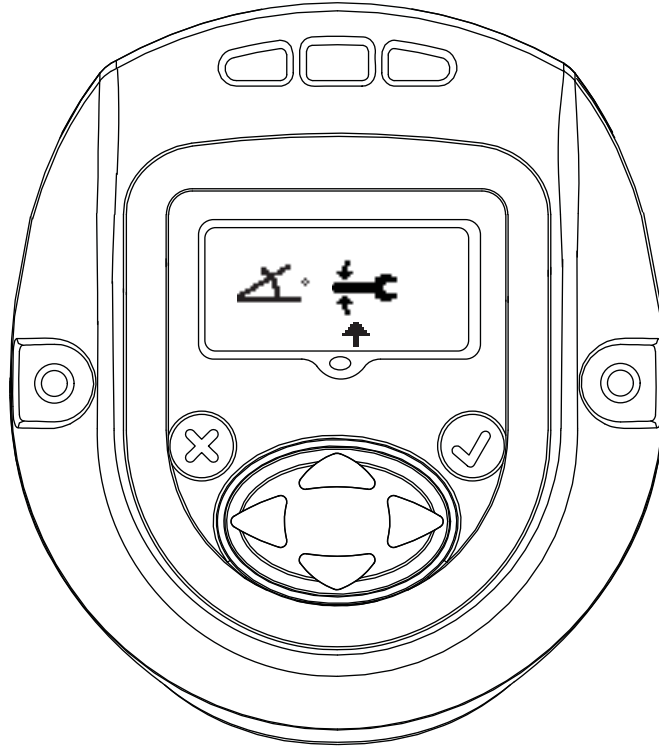

2.3.13. Save / Ignore Settings

After all the required changes are completed, Press enter to highlight the save settings box on the left. Press the right or left arrow key to select cancel on the right. Pressing enter a second time causes the tool to leave edit mode.




 SAVE SETTINGS

 CANCELSETTINGS

2.4. Warning Screen

This is the next screen obtained after pressing “UP” key when QX Series displays the Password screen.

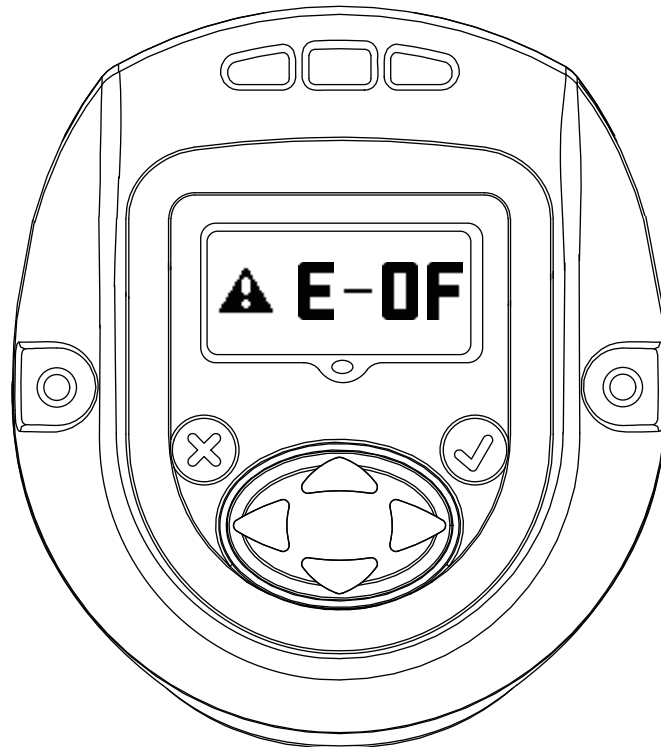


2.5. Shunt Calibration, RF Signal Strength and Battery level

This is the next screen obtained after pressing “UP” key when QX Series displays password screen.

Primary display indicates Shunt Calibration Value.


Secondary display on left indicates RF signal strength and the one on the right indicates Battery Level.

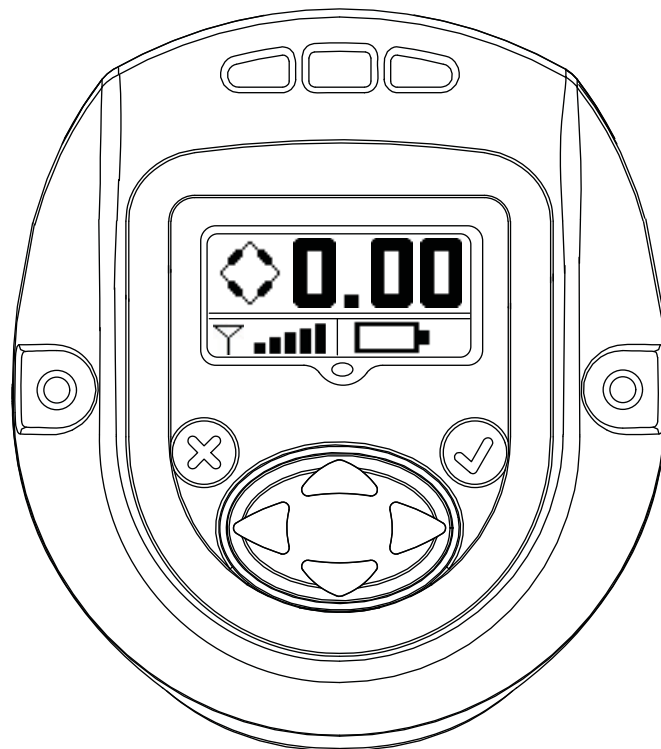

2.6. Cycle count

This value shows number of cycles run by the QX Series tool, Since the last time it was changed.

With the tool unlocked, press 'ENTER' key to edit this screen. Press either the 'UP' or 'DOWN' key to clear the cycle count. For this change to be retained a cycle must be run before removing power to the tool. Otherwise, the old cycle count is restored.

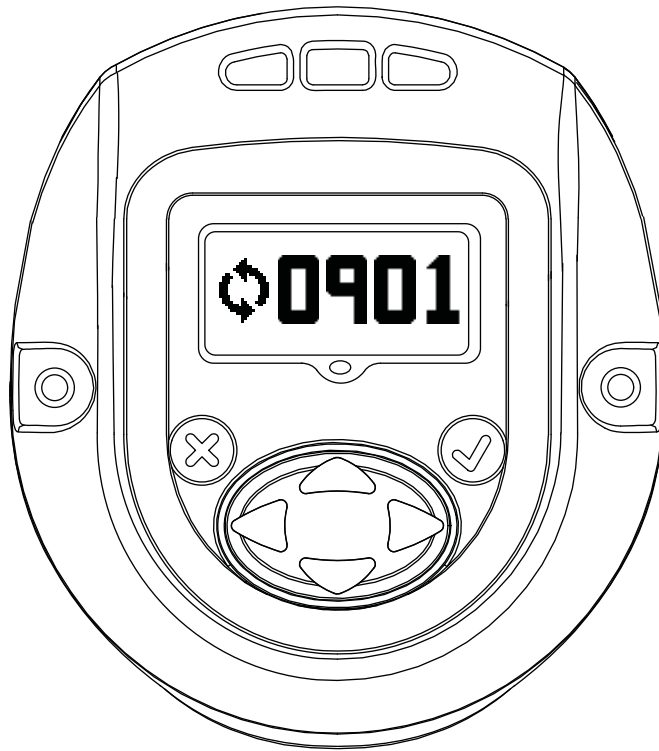


2.7. Angle

Primary display – Target Angle

Secondary Display on left - Angle low

Secondary Display on right - Angle High

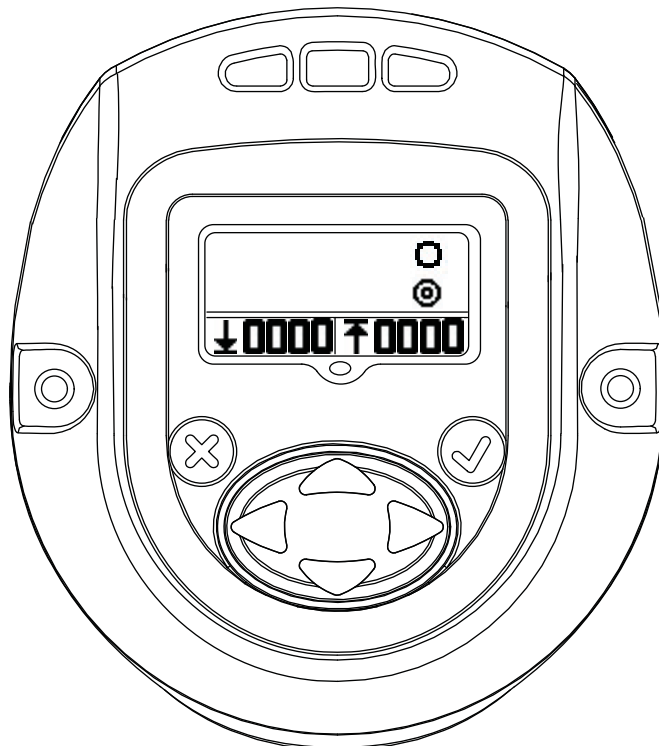


2.8. Torque


Primary Display -Target Torque

Secondary display on left - Torque low

Secondary display on Right - Torque high

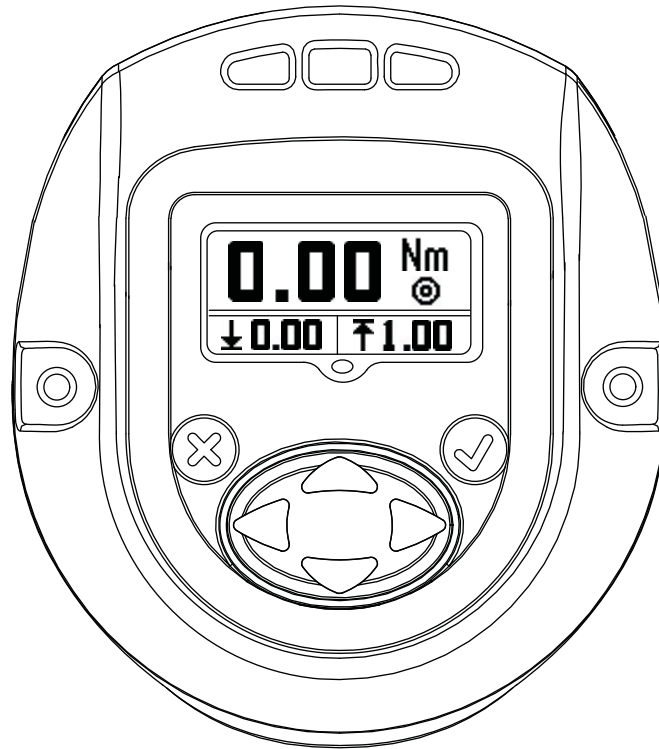

Pressing "UP" advances back to "RUN SCREEN", the first display screen.

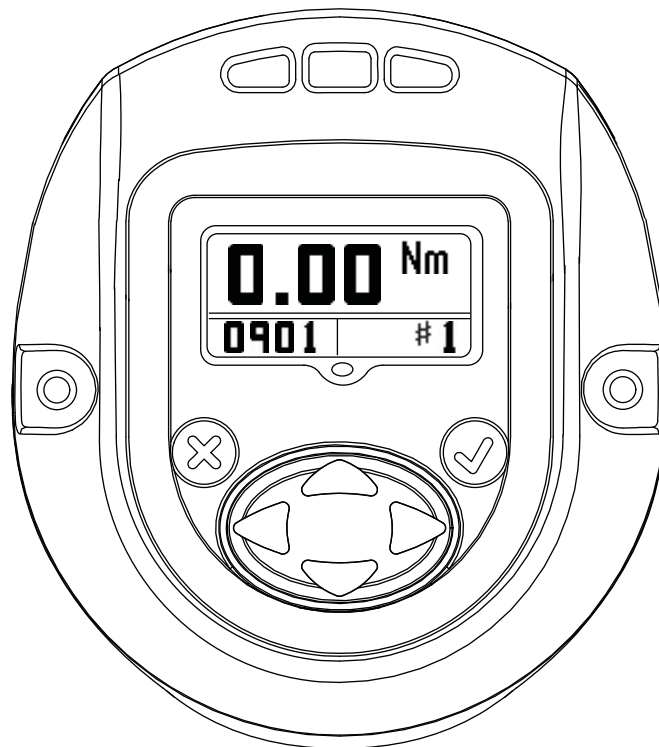

Appendix 1 : Status LED Definitions

There are four LEDs on the display module. 3 on the top and 1 below the display screen.

The Status LEDs shall be used as follows:

Red	--	The last tightening cycle exceeded its high limit
Yellow	--	The last tightening cycle ended below its low limit
Green	--	The last tightening cycle ended between its high and low limits
Blue	--	The tool has an active fault condition.

Appendix 2 : Tool Fault codes

The tool shall report the following fault codes for the listed conditions:

F-01	Tool Disabled (by external control)
F-02	Rapid Trigger pull – trigger was pulled before configuration delay was complete
1-FF	USB enumeration fault
A-10	Motor controller communication timeout
A-55	A display software version update was detected
B-01	Failure to update Motor Controller Software
B-85	RF ACK Timeout (we did not get a serial ACK messages from the transceiver)
B-E1	RF Transmit NAK–“Channel Access Failure”
B-E5	RF Transmit NAK–“Frame Too Long”
B-E9	RF Transmit NAK–“No ACK Received”
C-01	Configuration ID value is 0 or greater than 8
C-02	Number of configuration steps is greater than 8
C-03	Current Step ID is greater than the current number of steps
C-04	Total Gang is greater than 8
C-05	Current Gang count is greater than Total Gang
C-06	Current Torque High Limit is greater than the Tool’s maximum Torque value (Tool’s max torque value is configured in the Factory Set Points) OR Current Torque High Limit is less than 0
C-07	Current Torque Low Limit is greater than the Tool’s maximum Torque value OR Current Torque Low Limit is less than
C-08	Current Torque High Limit is less than Current Torque Low Limit
C-09	Current Torque Low Limit is greater than Current Torque High Limit (Fault code to be removed)
C-0A	Current Angle High Limit is greater than the Tool’s maximum Angle value (to be set to 9999)
C-0B	Current Angle Low Limit is greater than the Tool’s maximum Angle value (to be set to 9999)
C-0C	Current Angle High Limit is less than Current Angle Low Limit
C-0D	Current Angle Low Limit is greater than Current Angle High Limit (Fault code to be removed)
C-0E	Tool configuration step is a Target torque and the target value is outside the torque high and low limits
C-0F	Tool configuration step is an Target Angle and the target value is outside the angle high and low limits
C-10	Tool configuration step is not set for either Angle or Torque
C-11	Current Threshold value is greater than the maximum tool torque OR Current Threshold value is less than 0
C-12	Current Free Speed is greater than maximum motor speed
C-13	Current Shiftdown Speed is greater than maximum motor speed
C-14	Current display unit value is unsupported
C-15	Torque Threshold exceeds target (with torque target) or max torque (with Target Angle)
C-55	Invalid Configuration selection
E-00	Battery Fault
E-01	Invalid Hall State

E-02	I2T Fault
E-03	Motor Stall
E-04	Over Current
E-05	Over Temperature
E-06	Current Off set Fault
E-07	Shunt Calibration Fault
E-08	Torque Offset Fault
E-09	Transducer Fault
E-0A	Step Execution Timeout
E-0B	Configuration Execution Timeout
E-0C	Over Torque Limit
E-0D	Over Angle Limit
E-0E	Current Plausibility High
E-0F	Under Torque
E-10	Under Angle
E-11	Current Plausibility Low
E-12	Early trigger Release
E-13	Motor Controller Watch dog Reset
E-14	Brake Timeout
E-18	Missed Run Steps (Prevailing Torque configuration did not complete)
E-1B	Battery Cell Fault (detected by Motor Controller)
E-1C	Low Battery Fault (detected by Motor Controller)
E-1D	Critical Battery Fault (detected by Motor Controller)
E-1E	Motor Controller is shutting down
E-1F	Wakeup Code received (but not expected)
E-81	The configuration ID in the Motor controller's EOR did not match the currently selected configuration
2-<Alarm ID>	PM Alarm Time Fault for corresponding Alarm ID normally configured by the user
3-<Alarm ID>	PM Alarm Cycle Fault for corresponding Alarm ID normally configured by the user
C-16	Number of configuration steps is set to 0

Parts and Maintenance

Original instructions are in English. Other languages are a translation of the original instructions.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Notes:

www.ingersollrandproducts.com
© 2012 **Ingersoll-Rand, plc**

